


**Permanent ID
Information:**

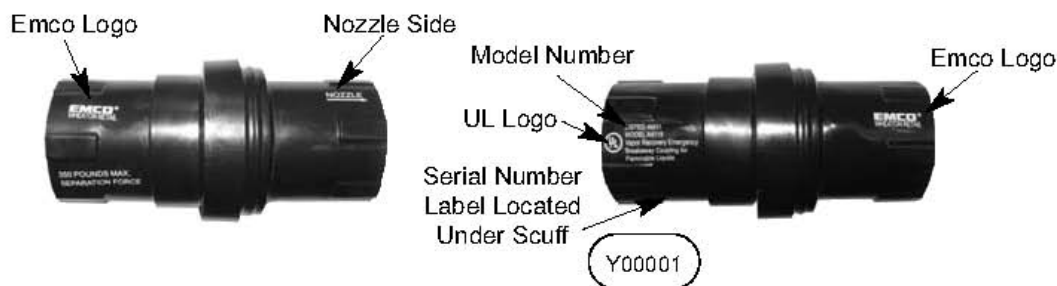

INSTALLATION INSTRUCTIONS

Service Tools Required:


- 1 7/8" Crows Foot
- Gasoline Approved Container
- Petroleum Jelly or Other Suitable Lubricant
- Torque Wrench w/ 50ft-lbs Setting
- Pipe Wrench w/ Flat Jaws

CAUTION:

1. Always barricade work area to keep pedestrians and vehicles from accessing the dispenser.
2. Always use a gasoline approved container or test can when performing any type of preventive maintenance.
3. Before attempting to install, remove or service the A4119EVR safe break valve, turn off and tag out power to the corresponding dispenser.
4. Before attempting to install, remove or service the A4119EVR safe break valve, close the emergency impact valves located inside the base of the dispenser. Relieve the line pressure and standing fuel through the nozzle spout into a gasoline approved container by compressing the bellows and squeezing the lever.
5. If a hose retractor is used, the A4119EVR safe break valve must be attached on the nozzle side of the retractor clamp.

IMPORTANT: Failure to perform cautions 3 and 4 may result in a hazardous gasoline spill, damage to equipment, personal injury and/ or death.

Pre-Inspection:

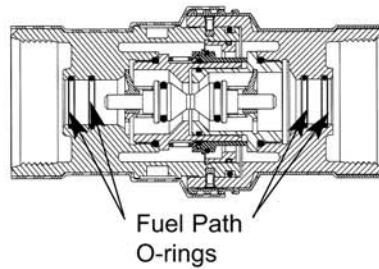

1. Carefully unpack and remove the A4119EVR safe break valve from the shipping container and evaluate for any kind of damage.
2. Verify the fuel path o-rings located on both ends of the A4119EVR safe break valve. All o-rings must be properly secured inside the factory machined grooves.

Pre-Installation:



3. Lightly lubricate the fuel path o-rings using petroleum jelly or other suitable lubricant.



4. Before attempting to install the A4119EVR safe break valve onto the whip hose, verify the word "NOZZLE", which is printed on the scuff guard of the safe break valve, is on the opposite end. Verify the vapor path o-ring is properly secured onto the connector, and in good working condition. Lightly lubricate the o-ring using petroleum jelly or other suitable lubricant.



5. Before attempting to install the A4119EVR safe break valve onto the curb hose, verify the vapor path o-ring is properly secured onto the connector, and in good working condition. Lightly lubricate the o-ring using petroleum jelly or other suitable lubricant.

IMPORTANT: Do not use pipe thread sealant compound or Teflon tape when installing the A4119EVR safe break valve. Failure to comply will void warranty.

Installation:

IMPORTANT: If this is a new facility installation, the fueling point must be flushed into a gasoline approved container before installing the A4119EVR safe break valve. Failure to perform this procedure could result in foreign material becoming lodged inside the safe break valve's fuel path causing a reduction in fuel flow.



6. Remove the scuff guard by sliding on to the whip hose. Attach the A4119EVR safe break valve onto the whip hose connector. Tighten by hand to avoid cross threading. Take caution to avoid pinching the vapor path o-ring.



IMPORTANT: Never tighten across the shear section of the A4119EVR safe break valve. Failure to comply will result in damage to the safe break valve and void warranty.



7. Using a 1 7/8" crows foot and torque wrench, tighten the whip hose connector to 50 ft-lbs of torque.



8. Remove the scuff guard by sliding on to the curb hose. Attach the A4119EVR safe break valve onto the curb hose connector. Tighten by hand to avoid cross threading. Take caution to avoid pinching the vapor path o-ring.



9. Using a 1 7/8" crows foot and torque wrench, tighten the curb hose connector to 50 ft-lbs of torque.

Post Functional Tests:

10. Carefully purge the trapped air from the fueling point. Begin dispensing by compressing the bellows and then squeezing the lever. Dispense one gallon of fuel into a gasoline approved container.
11. Functional test the automatic shutoff of the A4005EVR nozzle. Begin dispensing by compressing the bellows and then squeezing the lever. Place the hold open latch in "high" clip position to secure the lever. Dispense one gallon of fuel into a gasoline approved container. At the same time, lower the spout tip into the standing fuel until the vent hole is completely submersed. The main valve of the A4005EVR nozzle will automatically close causing fuel flow to stop.

IMPORTANT: Perform step 11 a minimum of three times to assure the insertion interlock, hold open latch and the automatic shutoff of the A4005EVR nozzle are operating properly.

According to UL requirement 842, the fuel flow rate must be greater than 3 gallons per minute for the automatic shutoff to operate properly. A common problem cause of low flow rates are dirty or clogged dispenser filters.

Post Inspection:

12. Before placing the A4005EVR nozzle onto the dispenser cradle, inspect all hanging hardware connections for potential fuel leaks. Make proper adjustments if necessary.

PREVENTIVE MAINTENANCE

1. Weekly inspect the A4119EVR safe break valve, evaluate for any kind of damage. Damaged components must be replaced with factory authorized service kits.

<u>Part Number</u>	<u>Description</u>
494748EVR	Fuel Path O-ring Kit

2. Weekly inspect all hanging hardware connections for potential fuel leaks.

IMPORTANT: Should a drive-off or incidence of customer abuse occur, follow the initial inspection and function instructions found in the installation section.

PERFORMANCE STANDARDS & SPECIFICATIONS

This component was factory tested to, and met the following specifications:

1. Meets ARB Material Compatibility with Fuel Blends as per Section 3.8 of CP-201.
2. TP-201.2J – Complies with the maximum allowable component pressure drop of 0.04 inches of water column @ 60 CFH.

IMPORTANT: Leave these installation instructions with the station owner and/or operator.

WARRANTY POLICY

Emco Wheaton Retail Corporation service station products are warranted to be free from defects in material and workmanship under normal use and service. Vapor recovery nozzles are warranted for a period of twelve (12) months from date of shipment from Emco Wheaton Retail Corporation or from installation date as specified by the returned warranty card, not to exceed fifteen (15) months from the date of shipment from Emco Wheaton Retail Corporation. This warranty excludes the spout and/or front end components of balance vapor recovery nozzles unless damage is obvious when the nozzle is removed from the shipping carton and the defective nozzle is returned to Emco Wheaton Retail Corporation prior to use and within two (2) months from the date of invoice. Other service station products are warranted for a period of twelve (12) months from the date of manufacture.

Emco Wheaton Retail Corporation shall, at its option, repair or replace that part which proves to be defective. Repaired or replacement nozzles are warranted for the balance of the original warranty period. This warranty is void unless the original purchaser returns the claimed defective item to Emco Wheaton Retail Corporation for inspection to determine whether the claimed defect is covered by this warranty.

The exclusive and sole remedy under this warranty is repair or replacement of the defective part. Emco is not responsible for claims for damage caused by improper installation or maintenance; corrosive fluids; misuse of the product or use the product for other than its intended purpose; or accident, acts of God, or natural phenomena. Emco will not pay for labor or related expenses, nor shall Emco be liable for any incidental, consequential or exemplary damages. This warranty is void if the Emco Wheaton Retail Corporation product has been previously repaired with parts not approved by Emco Wheaton Retail Corporation, or if a nozzle bears the mark or imprint of a company other than Emco Wheaton Retail Corporation, indicating the nozzle has been rebuilt or repaired by a company other than Emco Wheaton Retail Corporation.

EMCO WHEATON RETAIL CORPORATION MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, (WHETHER WRITTEN OR ORAL), INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

In the event a nozzle is returned to Emco Wheaton Retail Corporation within the warranty period described above, and when tested is found to be functional and without defect, Emco Wheaton Retail Corporation reserves the right to return the nozzle to the customer or apply a Core Credit (see Nozzle Core Return Program), at Emco Wheaton Retail Corporation's discretion.

In the event of failure within the warranty period, call the Customer Service Department at **(800) 234-4394**.

Describe the problem and provide the product date stamp information to the customer service representative.

In the case of a nozzle, provide the serial number. The customer service representative will provide a product complaint number, if applicable. Ship the defective equipment **PREPAID**, to Emco Wheaton Retail Corporation for repair or replacement.

Emco Wheaton Retail Corporation products should be used in compliance with applicable federal, state and local laws and regulations. Product selection should be based on physical specifications and limitations and compatibility with the environment and material to be handled. All illustrations and specifications are based on the latest product information available at the time of publication. Emco Wheaton Retail Corporation reserves the right to make changes at any time in prices, materials, specifications and models and to discontinue models without notice or obligation.

Emco Wheaton Retail Corporation warrants the workmanship and materials to be free of defects and will comply with the performance standards of California ARB CP-201 for a period of one (1) year from the date of installation or fourteen months from the date of shipment from Emco Wheaton Retail Corporation.

Emco Wheaton Retail Corp.

2300 Industrial Park Dr. • Wilson, NC 27893

252-243-0150 • 252-243-4759 (fax)

619-421-1743 (Technical Services, California)

p/n 569043

Rev. D, 06/09